

How to configure the Rhode & Schwarz FSP Series Spectrum Analyzer with OASIS

Introduction

This application note describes the procedure for connecting the Rhode & Schwarz FSP series



Figure 1. The Rhode & Schwarz FSP Series Spectrum Analyzer

spectrum analyzer to a computer running the OASIS spectrum management software.

Requirements

The Rhode & Schwarz FSP series spectrum analyzer (refer to the release notes for firmware requirements) is designed to communicate to OASIS through the PC control interface GPIB. Be sure to have the most current OASIS driver for this instrument.

Step 1. Power-Down the System

Power off both the Rhode & Schwarz FSP series spectrum analyzer and the computer terminal running the OASIS spectrum management software.



Step 2. Connecting to the Rhode & Schwarz

Connect the GPIB interface cable to the Rhode & Schwarz FSP series spectrum analyzer. Set the GPIB address to the desired address.



For more information about setting the GPIB address consult your instrument documentation.

Step 3. Connecting to the Computer

Connect the other end of the GPIB interface cable to the computer running the OASIS spectrum management software.

If you need help installing a GPIB interface in the computer running OASIS click [here](#).

Step 4. Power-Up the System

Power-Up the Rhode & Schwarz FSP series spectrum analyzer followed by the computer terminal that is running OASIS.




Step 5. Run OASIS

Run OASIS. Click on **Frequency** -> **Receiver Setup** -> **Configure Receivers** and select **OK** when prompted to pause data acquisition.




Step 6. Add the Rhode & Schwarz FSP

Click on **Add Receiver** and select the **Rhode & Schwarz FSP Series Spectrum Analyzer, 1**.

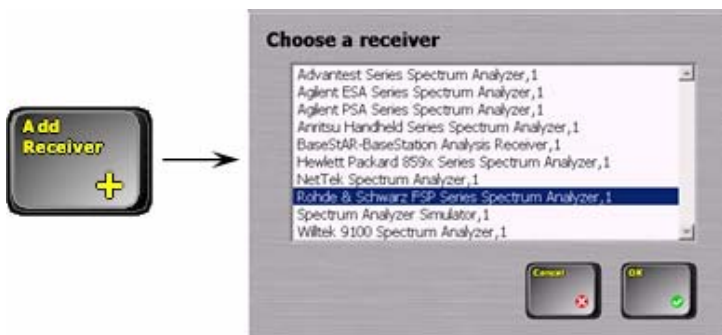

Step 7. Select the Address

Select the GPIB address of the Rhode & Schwarz FSP series spectrum analyzer by pressing the up and down arrows on the Receiver Configuration screen.

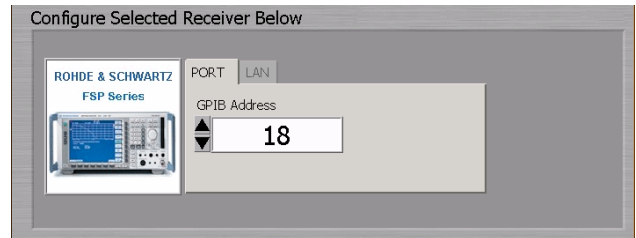


Step 8. Check the Rhode & Schwarz FSP

Press **Check Receiver** button. If there is an error that appears in the Receiver Configuration screen, please consult the Receiver Configuration Troubleshooting Guide otherwise press the **OK** button.



Step 9. Select the Rhode & Schwarz FSP

Once the instrument is added, press the **Select Receiver** button and select **Rhode & Schwarz FSP Series Spectrum Analyzer, 1**.

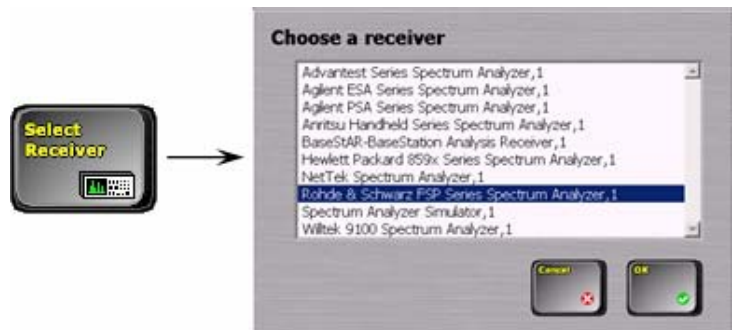

For More Help

If further assistance is needed contact Summitek Instruments.

URL: www.summitekinstruments.com/contact.html

Phone: 1.303.768.8080

Fax: 1.303.768.8181